


SnapFast™ Clamp Instructions


General Information

Installing the SnapFast clamp is easy. For live lines up to 115 kV, you need the SnapFast Installation Tool and an insulated hot stick. For higher voltages we advise installing on the top static/ground wire. SnapFast is also safe for OPGW lines. The clamp comes in two sizes for wire diameters from 10–70 mm (0.39–2.75 in.) or 4–16 mm (0.16 to 0.63 in.). Recommended spacing is every 30 feet.

Products mounted with SnapFast clamps

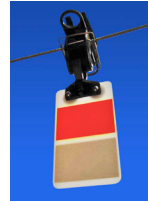

FireFly

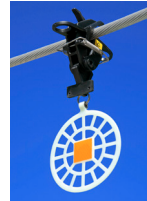

BirdMark



QuikMark



SpanMark

Mounting Instructions

1. Attach the SnapFast Installation Tool to the hot stick.




2. Open the SnapFast clamp with your hands, using the large finger holes to avoid getting hurt.



Warning! Handle the opened clamp very carefully, as it snaps closed with significant force and could cause injury.

3. Place the open SnapFast clamp on the installation tool.

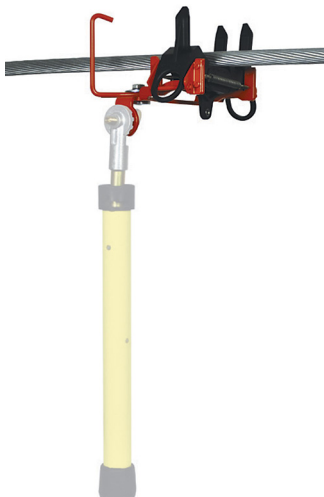


4. Use the hot stick to push the open clamp against the line until it snaps on and locks itself.



Unmounting Instructions

To unmount the SnapFast clamp, use the hook on the installation tool. Insert the hook into a large finger hole and pull down.

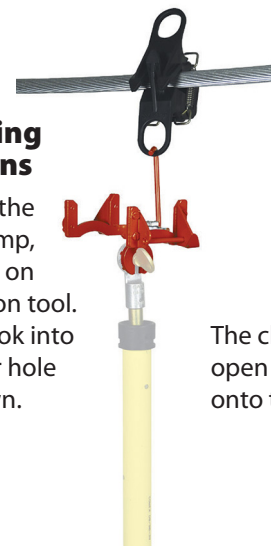

The clamp will open and slide onto the hook.

